

Pump Up Foamer Pro, 3 Gallon

MODEL # 925005

OVERVIEW

The 3 Gallon Pump-Up Foamer Pro is a portable foam applicator for applying foaming chemicals to any surface as high-quality, rich, clinging foam. This professional model projects foam in a wide fan pattern for quick, but still precise, foam coverage. The 3 Gallon Pump-Up Foamer Pro features a heavy-duty hose, trigger gun, and extension wand and combines the many advantages of foam cleaning with the familiar ease and portability of a typical pump-up sprayer. If compressed air is available, use the "quick charge" valve to eliminate pumping!

Key Features

- Creates rich, clinging foam that adheres to surfaces longer to maximize chemical effectiveness
- Combines the advantages of foam application with the familiar ease and portability of a pump-up sprayer
- Projects the ideal amount of foam for small or large jobs requiring maximum portability
- Foaming expands the chemical and reduces over-application by providing visual assurance of coverage
- Just fill the tank with ready-to-use chemical solution, pump it up and foam!
- Use the "quick charge" valve to pressurize with an air compressor instead of pumping (must disconnect airline during operation)
- Heavy-duty, easy-grip trigger gun with locking latch
- Wide fan pattern nozzle for fast application
- Viton/Nitrile o-rings and internal seals are compatible with a wide range of cleaning chemicals (soaps/detergents) and are also resistant to acidic chemicals
- Available with EPDM seals (#925005-E)
- Available with a 1.5 gallon tank (#925004)
- Prepare perfectly blended chemical solutions with a [Lafferty Mixing Station](#)
- See other portable chemical applicators in [Catalog 11](#)

Includes

- Heavy-duty 3 gallon polyethylene tank with UV inhibitor
- Tank stabilizing base
- Heavy-duty manual pump
- Viton/Nitrile seals and o-rings (EPDM kit available)
- Tube of silicone grease
- Pressure relief valve
- Compressed air "quick charge" valve
- Machined foamer body
- 6' discharge hose
- Heavy-duty trigger gun with Viton internal seals
- Polypropylene 10" wand & stainless steel fan nozzle

OPTIONS

Repair Kit

| | |
|----------------------------------|------------|
| O Ring & Seal Repair Kit (Viton) | # 709040 |
| O-Ring & Seal Repair Kit (EPDM) | # 709040-E |
| Silicone Lubricant, 5 Gram Tube | # 709049 |

Proportioning / Filling Options

| | |
|---|----------|
| 1-Way Ball Valve Mixing Station (4 GPM) | # 985100 |
| 1-Way Push Lever Mixing Station (4 GPM) | # 981100 |

Optional Zero Degree Nozzle (For Increased Range)

| | |
|-------------------------|----------|
| Nozzle, SS, 1/4" - 0030 | # 180030 |
|-------------------------|----------|

APPLICATIONS

- Agriculture/Horticulture
- Animal Health
- Asphalt
- Vehicle Wash
- Food & Beverage
- Industrial
- Janitorial/Sanitation
- Pharm/Bio



REQUIREMENTS

Ready-to-Use Chemical Solution

| | |
|------------------------|--------------|
| Temperature | up to 120°F |
| Accepts Compressed Air | up to 45 PSI |

Installation & Operation Instructions

Model # 925005 · Pump Up Foamer Pro, 3 Gallon

REQUIREMENTS

Ready-to-Use Chemical Solution

| | |
|------------------------|--------------|
| Temperature | up to 120°F |
| Accepts Compressed Air | up to 45 PSI |

OPTIONS

Repair Kit

| | |
|----------------------------------|------------|
| O Ring & Seal Repair Kit (Viton) | # 709040 |
| O-Ring & Seal Repair Kit (EPDM) | # 709040-E |
| Silicone Lubricant, 5 Gram Tube | # 709049 |

Proportioning / Filling Options

| | |
|---|----------|
| 1-Way Ball Valve Mixing Station (4 GPM) | # 985100 |
| 1-Way Push Lever Mixing Station (4 GPM) | # 981100 |

Optional Zero Degree Nozzle (For Increased Range)

| | |
|-------------------------|----------|
| Nozzle, SS, 1/4" - 0030 | # 180030 |
|-------------------------|----------|

WEIGHT & DIMENSIONS

Single Package

| | |
|---------------------|-----------------|
| Shipping Weight | 9 lbs. |
| Shipping Dimensions | 11" x 11" x 28" |



OVERVIEW

The 3 Gallon Pump-Up Foamer Pro is a portable foam applicator for applying foaming chemicals to any surface as high-quality, rich, clinging foam. This professional model projects foam in a wide fan pattern for quick, but still precise, foam coverage. The 3 Gallon Pump-Up Foamer Pro features a heavy-duty hose, trigger gun, and extension wand and combines the many advantages of foam cleaning with the familiar ease and portability of a typical pump-up sprayer. If compressed air is available, use the "quick charge" valve to eliminate pumping!

SAFETY & OPERATIONAL PRECAUTIONS

- Manufacturer assumes no liability for the use or misuse of this unit.
- Wear protective clothing, gloves and eye wear when working with chemicals.
- Always direct the discharge away from electrical devices and people/animals (as appropriate)
- Follow the chemical manufacturer's safe handling instructions.

SPECIAL PRECAUTIONS

- This high density polyethylene unit is fitted with Viton seals. Chemicals and lubricants not compatible with polyethylene or Viton should not be used. (EPDM seals are available for separate purchase.)
- Do not alter pressure relief valve or plug valve hole.
- Regularly lubricate pressure relief valve with a non-water-soluble grease (such as a silicone compound) and ensure proper operation, using water in the tank, prior to each use. Regular lubrication of cap seal and threads with a non-water-soluble grease will help ensure proper sealing of cap.
- Do not lift or carry by the hose or trigger gun. Securely tighten pump: loose pump can be forcibly ejected.
- Carefully follow chemical manufacturer's safe handling instructions and recommended precautions/practices when using flammable chemicals. Do not use hot liquids.
- Do not exceed 45 psi pressure and do not inflate without liquid in the tank
- Do not fill the tank over 3/4 full. Relieving pressure in an overfill condition can cause harmful venting of contents.
- Never stand with face or body over the top of tank when loosening pump or relieving pressure.
- After pumping, be sure the handle is in the locked down position
- On completion of operation, with the tank in the upright position, relieve pressure in the tank by gently pulling up on the pressure relief valve on the side of the tank.

WARNING

This unit is equipped with a built-in inflation valve and can be pressurized using an air compressor. Extra caution is required when using a compressor, as the unit will be pressurized much more rapidly than when hand-pumping. Failure to follow the following procedure could result in serious injury to the operator or others.

1. Before each use of a compressor be certain that:
 - a. The umbrella valve, located at the bottom of the cylinder, is installed and functioning properly.
 - b. The pump assembly is screwed tightly to the tank.
 - c. The pressure relief valve is functioning properly. Check by pulling up on the valve until the red stem shows. The valve stem should move freely and spring back to its original position when released. The O-ring and valve stem must be greased.
 - d. Check the hose clamp and tighten if loose.
2. Additional Precautions:
 - a. Do not stand over the pump handle while pressurizing with an air compressor or while releasing the handle from the locked position. Compressed air can cause the pump handle to pop up if the umbrella valve is worn or damaged or if the pressure relief valve is not functioning.
 - b. Do NOT leave the airline attached to the tank during operation.

TO INSTALL (REFER TO DIAGRAM ON NEXT PAGE)

1. Turn the pump lid counterclockwise to remove pump and lid.

NOTE: Do not remove or tighten the lid using the handle. Rotational force on the handle can cause damage.

2. Add water and foaming chemical to the tank. You will have to experiment with each chemical to see how much of the concentrate you will need to add to the water to create foam. Not all chemicals will foam.
3. Leaving extra "air space" in the tank and less chemical will give longer foaming time between re-pressurizing. A half-full tank is ideal. DO NOT FILL THE TANK OVER 3/4 FULL (75%) .
4. Securely tighten cap and pump for a good seal. (Regular lubrication of cap seal and threads will help ensure proper sealing and removal of cap).
5. Push the handle down and turn counterclockwise to unlock.
6. Pump the handle until resistance is felt, this will take several strokes. Continue pumping till the resistance is too hard to pump or pop-off valve starts to rise. Make CERTAIN the handle is in the locked down position.


NOTE: It is a good idea to thoroughly rinse out the tank, fill with water, partially re-pressurize, and discharge to flush out the entire hose/nozzle assembly after use and before storing foamer. When using aggressive or corrosive chemicals never leave chemical solution in the tank after use.

TO OPERATE


1. Pump foamer until the pressure relief valve starts to rise/relieve.
2. Pull the trigger to start and stop foaming. Re-pump up as foam begins to slow down.
3. On completion of foaming operation, with the tank in the upright position, relieve pressure in the tank by gently pulling up on the pressure relief valve on the side of the tank.
4. Prior to every refill of the tank, pull up on relief valve to ensure no pressure is there before removing the lid and pump.
5. To store: Partially fill the tank with fresh water and pump it up. Pull the trigger and rinse the foamer out.

NOTE: If a richer foam is desired, remove the foam nozzle from the discharge and insert the brown "foam pad" in the nozzle itself. Replace nozzle.

WHEN USING AN AIR COMPRESSOR: Place pump handle in the unlocked position and pressurize slowly till the pop-off valve starts to rise. If the **pump handle** rises...DISCONTINUE PRESSURIZING! Relieve pressure by pulling up on the pressure relief valve, remove pump and check the umbrella valve for wear or damage. Do not pressurize until worn or damaged parts have been replaced and the handle does not rise during pressurization.

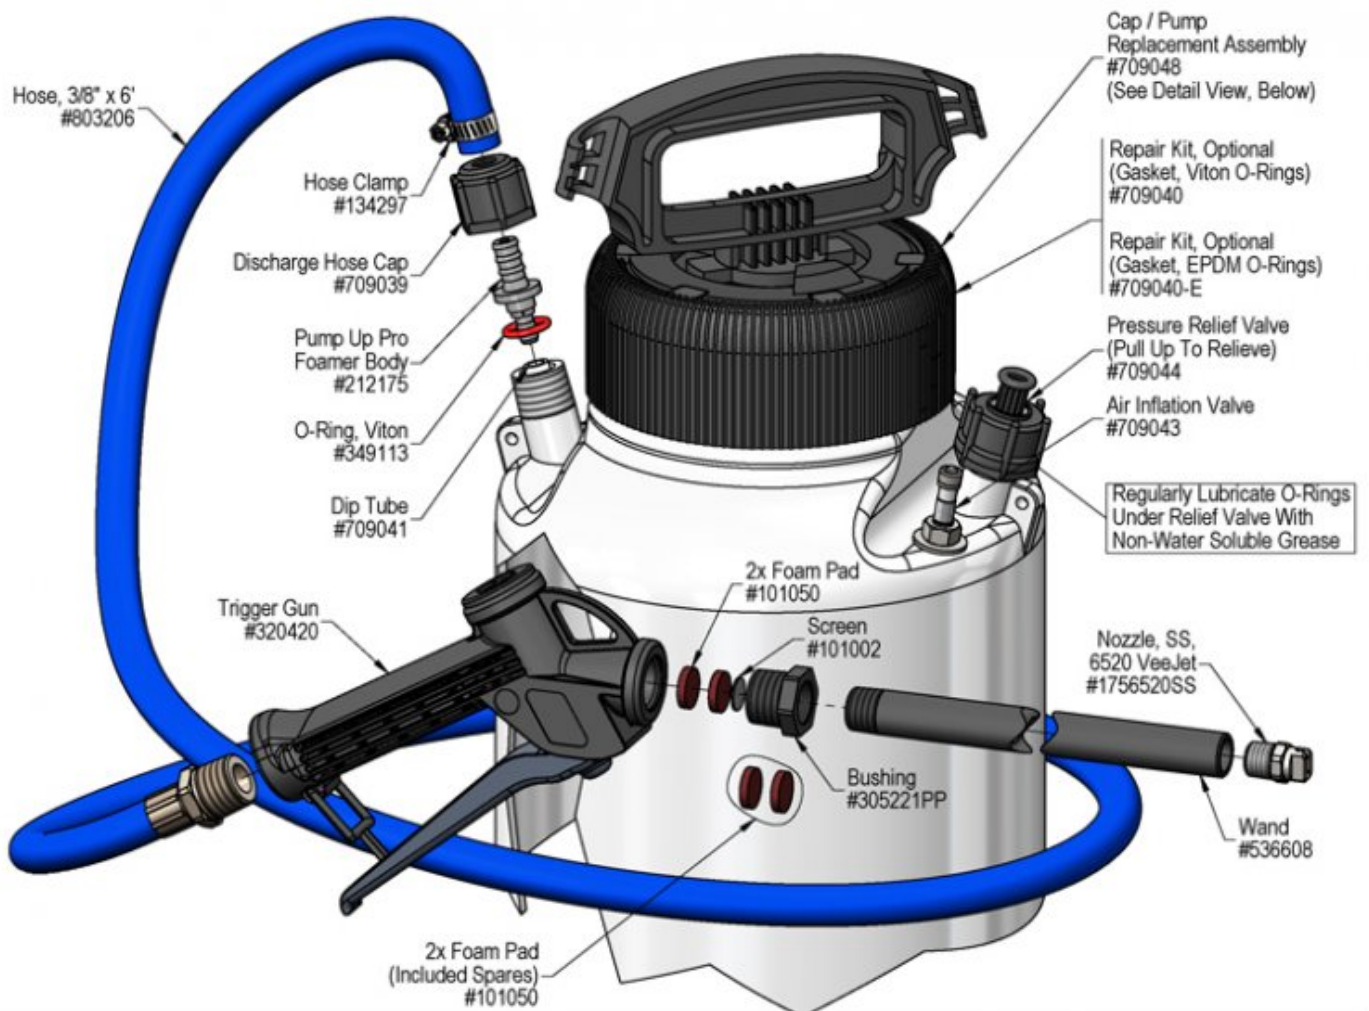

#709048 Detail View

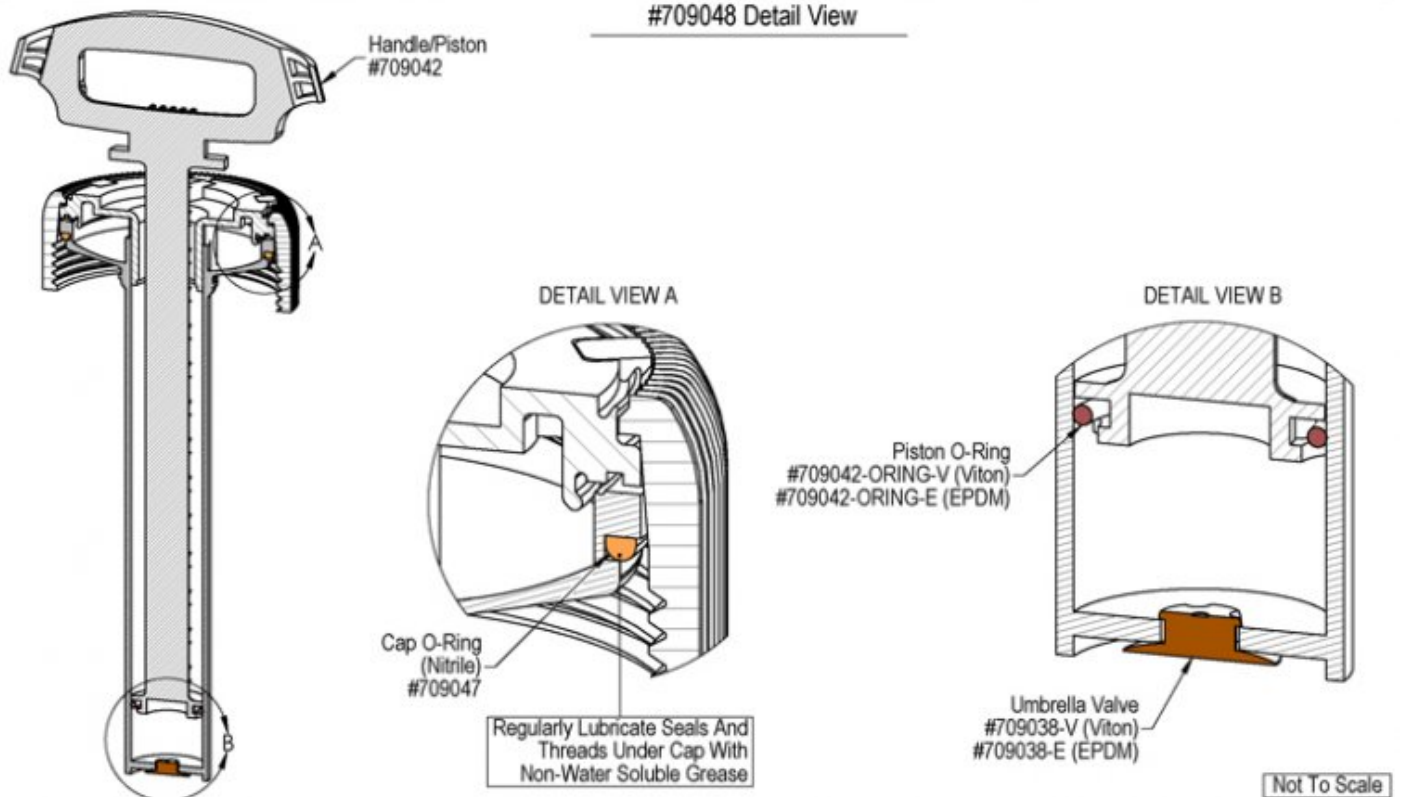

Troubleshooting Guide

| Problem | Possible Cause / Solution | |
|--|---------------------------|-------------|
| | Startup | Maintenance |
| A) Foamer sputtering or foam not acceptable | 1, 2 | 3, 4 |
| B) Foam is too wet | 1, 2 | |
| C) No foam output / unit will not foam | 1 | 3, 4 |
| D) Tank will not pressurize and/or hold pressure | | 3 |

| Possible Cause / Solution | |
|---|---|
| Startup | Maintenance |
| <p>1. Not enough air pressure</p> <ul style="list-style-type: none"> ◦ Pump up the foamer several strokes ◦ Less liquid in the tank will allow for more air pressure to build and foam for longer without re-pumping (use a half full tank for best results) ◦ The air relief valve will rise when maximum pressure is achieved <p>2. Solution too weak</p> <ul style="list-style-type: none"> ◦ Increase concentration of chemical solution ◦ Ensure that the chemical foams naturally or use a foaming additive (not all chemicals foam) | <p>3. Air leaks due to loose lid, worn or damaged components/fittings</p> <ul style="list-style-type: none"> ◦ Ensure lid is snug, but not overtight. Lubricate the lid and pressure relief o-rings. Order repair kit and replace damaged o-rings, gaskets, umbrella valve etc. See page 3 for part numbers ◦ Refer to the Pump-Up O-Ring Replacement Guide http://appequip.net/uploads/documents/pump-up-o-ring-replacement.pdf ◦ The o-ring on the piston (inside the shaft) <u>creates</u> pressure and should be kept well-lubricated since it is exposed to friction from pumping. Replace as needed. ◦ The umbrella valve on the bottom of the piston shaft <u>holds</u> pressure in the tank and needs to form a tight seal. Do not scratch the valve seat! Replace as needed. ◦ Ensure that your chemical and lubricant are compatible with the o-ring seals for this equipment. Incompatible chemicals or lubricants can quickly degrade the o-rings. <p>4. Debris clogging foamer body</p> <ul style="list-style-type: none"> ◦ Relieve air pressure by gently pulling up on pressure relief valve stem and remove the lid. Reach inside and pull down on the chemical tube to remove it along with the (grey) foamer body, visually inspect and remove debris from the small ports in the foamer body. Replace foamer body and tube. <p>5. Foam pads clogged</p> <ul style="list-style-type: none"> ◦ Remove foam pads from gun (see diagram) and rinse to remove debris and/or chemical buildup before replacing. Replace as needed. |

PREVENTIVE MAINTENANCE: * Prior to storage, empty, clean and dry the foamer. * Lubricate o-ring in pressure relief valve and the piston/cylinder with a compatible non-water soluble grease (such as a silicone lubricant) on a regular basis. * Lubricate tank cap threads and both sides of the gasket to achieve a tight seal and to ease tightening and loosening. * Replace cracked or damaged seals before use.